

General MIDI PERCUSSION Key Map

For MIDI Channel 10, each MIDI KEY number ("NOTE#") corresponds to a different drum sound, as shown below. While many current instruments also have additional sounds above or below the range show here, and may even have additional "kits" with variations of these sounds, only these sounds are supported by General MIDI Level 1 devices.

Key#	Note	Drum Sound	Key#	Note	Drum Sound
35	B0	Acoustic Bass Drum	59	B2	Ride Cymbal 2
36	C1	Bass Drum 1	60	C3	Hi Bongo
37	C#1	Side Stick	61	C#3	Low Bongo
38	D1	Acoustic Snare	62	D3	Mute Hi Conga
39	Eb1	Hand Clap	63	Eb3	Open Hi Conga
40	E1	Electric Snare	64	E3	Low Conga
41	F1	Low Floor Tom	65	F3	High Timbale
42	F#1	Closed Hi Hat	66	F#3	Low Timbale
43	G1	High Floor Tom	67	G3	High Agogo
44	Ab1	Pedal Hi-Hat	68	Ab3	Low Agogo
45	A1	Low Tom	69	A3	Cabasa
46	Bb1	Open Hi-Hat	70	Bb3	Maracas
47	B1	Low-Mid Tom	71	B3	Short Whistle
48	C2	Hi Mid Tom	72	C4	Long Whistle
49	C#2	Crash Cymbal 1	73	C#4	Short Guiro
50	D2	High Tom	74	D4	Long Guiro
51	Eb2	Ride Cymbal 1	75	Eb4	Claves
52	E2	Chinese Cymbal	76	E4	Hi Wood Block
53	F2	Ride Bell	77	F4	Low Wood Block
54	F#2	Tambourine	78	F#4	Mute Cuica
55	G2	Splash Cymbal	79	G4	Open Cuica
56	Ab2	Cowbell	80	Ab4	Mute Triangle
57	A2	Crash Cymbal 2	81	A4	Open Triangle
58	Bb2	Vibraslap			